

Final Step for Connecting Your Chargers to the Blink Network

What is Commissioning?

Commissioning needs to be completed by your contractor or electrician. This last installation step ensures that your charger is programmed safely to the correct amperage and voltage to not dispense too much or not enough energy and trip the circuit breaker. It also connects your charger to our network, providing Blink with your equipment’s critical information and unlocking host resources for you.

With the Blink Network you can:

- Set hours of operation
- Determine who can use the charger and when
- Verify the current state of the equipment
- Remotely control the charger
- View the amount of energy drivers use
- Establish pricing for energy used
- Create custom reports of energy used, revenue generated, and more

Commissioning Steps for Your Contractor

1 Collect: It is critical for your contractor to collect the following information and pictures to send to Blink during the commissioning process. If you, or your contractor, have any questions, please call (888) 998.2546 x2 while standing in front of the charger.

- | | |
|--------------------------------------------------------|----------------------------------|
| a. Picture of the 3 crimped wires | e. Wire size |
| b. Picture of the final installation completed | f. Line 1 voltage |
| c. Latitude and longitude
Learn How | g. Line 2 voltage |
| d. Breaker size | h. Line 1 and 2 combined voltage |
| | i. Dedicated or shared circuit |

2 Call: Blink Network Operations Center (NOC) between the hours of 6am–5pm MST at (888) 998.2546 x2. The technician on the phone will provide you an email address to send all of the information and pictures.

If you have any questions, please don’t hesitate to ask your sales executive.

Contact Host Support at (888) 998.2546 x2 or email hostsupport@blinkcharging.com.

While these recommendations by Blink are intended to assist and guide you with your deployment and installation of your new Blink chargers, these are meant only as suggestions. Blink insists that you do your research and come to your own conclusions, as your say is the final one and Blink does not accept, and you expressly release Blink from, any liability for any accidents or damage which arise out of your following of Blink’s recommendations during the installation process.